ROOTLAB

REPLACEMENT GUIDE

ALL AMERICAN PART #65

Control Valve

The weighted control valve sits on the vent pipe on top of the lid and releases steam at 23 to 28 psi. Replace it if it leaks, sticks or is damaged.

Fits: 1915X, 1925X, 1941X, 25X, 50X and 75X

TOOLS NEEDED

11/16 in combination spanner
5/8 in combination spanner
A few drops of olive oil




The control valve on the vent pipe.

Remove the old valve



1. Hold the vent pipe still with the 5/8 in spanner. Use the 11/16 in spanner to turn the control valve anticlockwise and unscrew it.

Fit the new valve

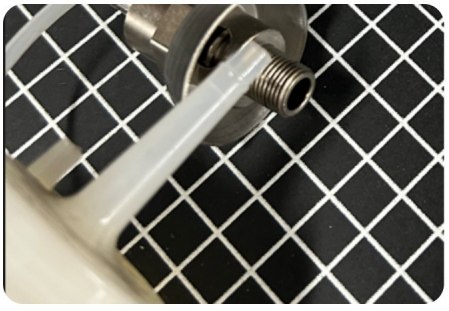

2. Put a drop of olive oil on the threads of the new control valve.



3. Screw the valve clockwise onto the vent pipe by hand. Finger tight only for now.



4. Hold the vent pipe with the 5/8 in spanner. Turn the valve clockwise one full turn with the 11/16 in spanner.

⚠ **Warning:** do not overtighten. Stripped threads on the control valve make the steriliser unsafe to use.

Need a part or a hand?
info@rootlab.com.au · 1300 386 487 · rootlab.com.au

Use only genuine All American parts. Steps adapted from All American 1930 (Wisconsin Aluminum Foundry).